

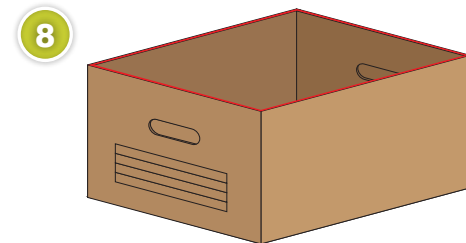
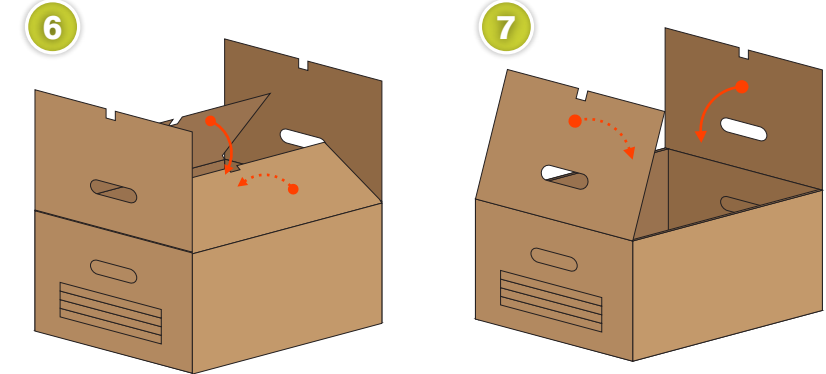
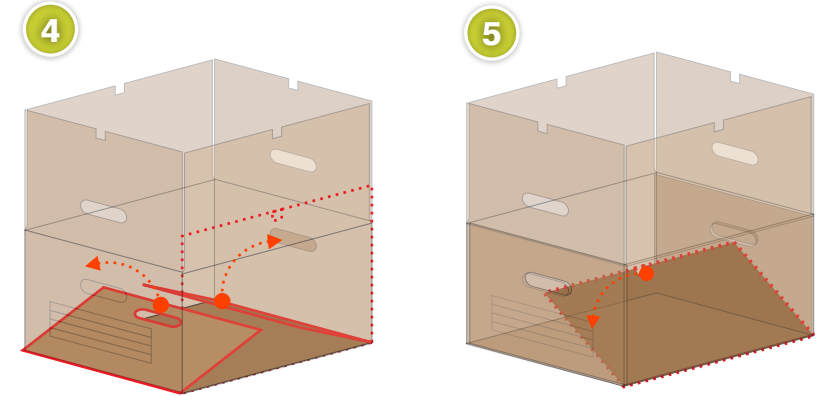


Box Assembly

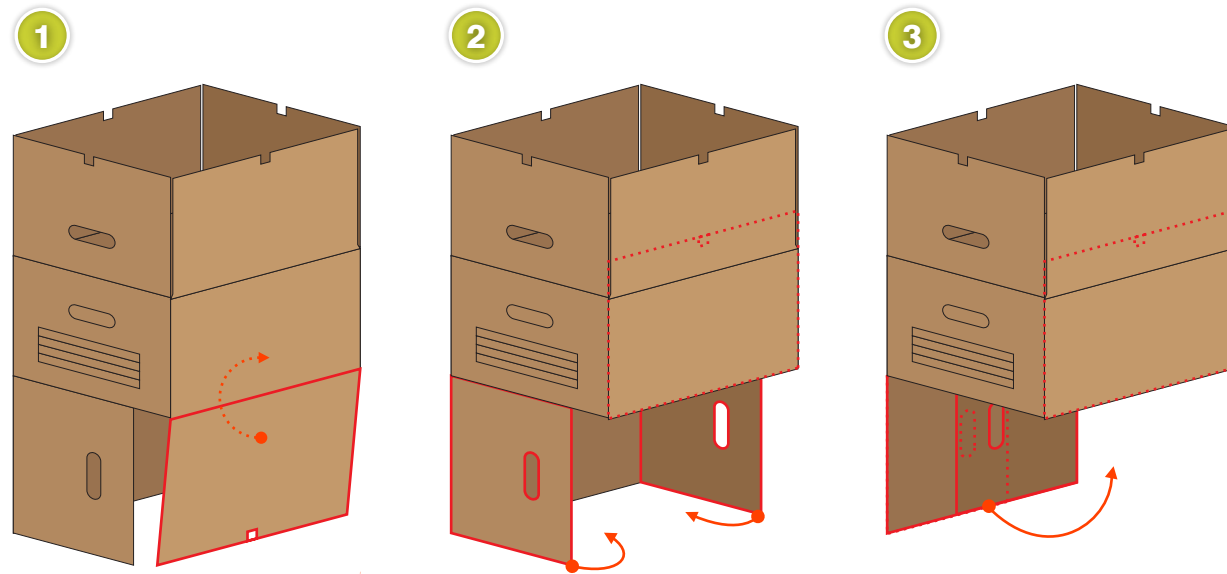

Lid Assembly

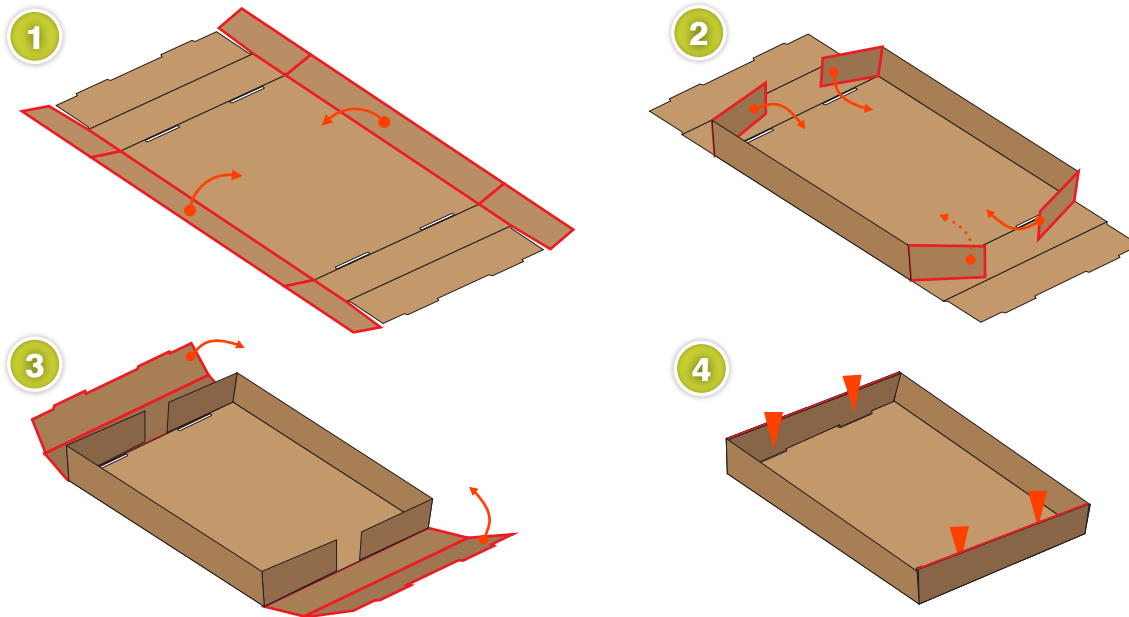

Tools Required

No tools are required

Safety Precaution

It is advisable to wear thin safety gloves to avoid cuts by sharp paper edges

Holds **20kg**



scan for more info