

**Tools Required**


- Large Rubber Mallet
- Flat Head Screwdriver
- Wood Drill Bit & Drill ( 7mm )
- Spanner ( 11mm )
- Protective Gloves
- Goggles

**5**

**Attention**

If using bin fronts, install from the bottom, one shelf at a time.

1. Bin front panel. 2. Shelf. 3. Upright.

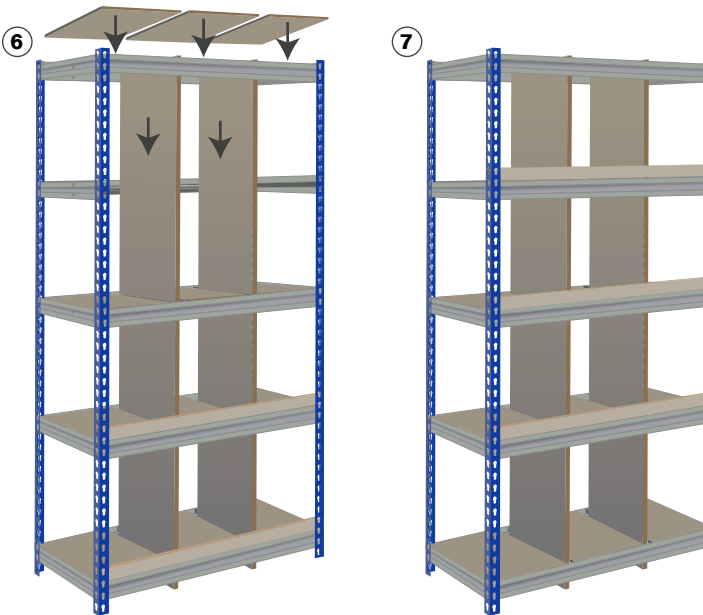

**8**

7mm

Panel Upright

Bolt Spacer Nut

Align back panel. Mark drilling positions through the upright keyhole - top, middle and bottom on both sides. Drill and fit using the supplied M6x25 nuts & bolts. Repeat for side panels.